

ST Blade Fuse Block


3 Independent Sourced Circuits, 3 Common Sourced Circuits PN 5035 / PN 5037

Wiring Diagram Example

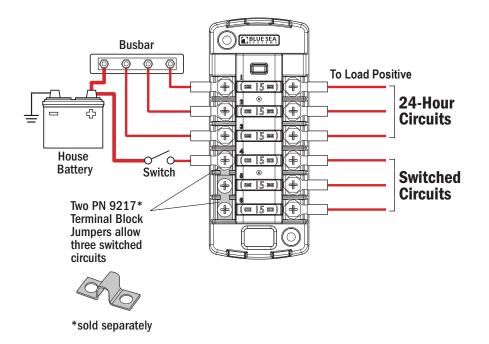

Push yellow latch down to open the cover

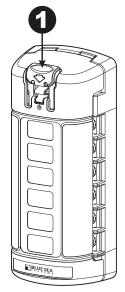

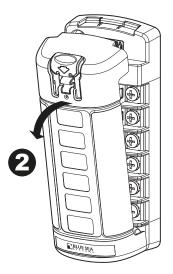



425 Sequoia Drive Bellingham, WA 98226 USA p 360.738.8230 p 800.222.7617 USA and Canada Customer Service f 360.734.4195 conductor@bluesea.com

www.bluesea.com