

MAJESTIC®

powered by webOS TV



Quick Start Guide Model: SLT190U

Please read this manual carefully before TV operation.
Retain it for future reference.

PREFACE

1. Read this Quick Start Guide before starting Set-up.
2. Then, carefully follow the Instructions, heeding all Warnings.
3. Do Not remove the TV back cover or block the TV ventilation openings.
4. Do Not use the TV near water or a heat Source.
5. Do not pinch or cut the Power Cord.

Note:

The product and illustrations in this user's manual is only for explanation purposes and may vary depending on model.

WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls

If your existing television set is being retained and relocated, the same considerations as above should be applied.

The plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

1. General Information

To avoid damaging the television set please observe the following safety instructions during setup and use.

Attaching to a wall mount	Please ensure that the screws (M4) project into the television set by no more than 8 mm. The use of longer screws can damage the television set.
Cleaning the television set	Before cleaning, disconnect the television set. Use only a soft damp cloth or a special cleaning product for flat-screens.
LED Display	Too much pressure on the screen can damage the television set.
Heat/damp/humidity	The television set should not be exposed to high temperatures (direct sunlight, radiators, open fire) or to damp. The television set should not be used in areas with high humidity.
Condensation	If moved from a cool area to one with a higher temperature, the television set should be left for at least an hour before plugging it in. A rapid change of temperature can lead to the formation of condensation in the television set itself. This can lead to damage if the television set is in use.
Air Circulation	To prevent overheating of the television set the ventilation slots at the rear should always be clear.
Small Objects	It is important to ensure that no small objects or liquids enter the television set. They can cause damage or even fire.
Liquids/Candles	Do not place anything holding a liquid or any candles on the television set.
Crushing	Take care to avoid crushing fingers or other objects when turning the television set in any direction.
Electric Supply	Use the television set only with the voltage indicated in the specifications. Ensure that there is easy access to the plug and that the television set can always be disconnected from the electricity supply. Do not disconnect the television set by pulling the power cable. Always take hold of the plug. The power cable must not be kinked or placed over sharp edges.
Moving the Television Set	When moving the television set, hold only the casing.
Repairs/Accessories	Repairs and servicing must be undertaken only by authorised and trained personnel.
Recycling	Electronic devices must be disposed of separately from household waste at authorised disposal sites or handed over to a specialised supplier. Batteries are to be disposed of only in containers provided for this purpose.

 
2. Delivery Contents

- > LED television
- > Magic Remote control with 2 AA batteries
- > 12 volt cable for use with motor vehicle
- > Quick Start Guide
- > VESA mounting screws (BM4*8 4pcs)
- > Base stand
- > Power adaptor (12V, 3A)

3. Assembly

Stand Assembly (optional)

1. To avoid damage, place the screen on a soft flat surface.
2. Attach the stand to the underside of the television set by means of the two screws provided.

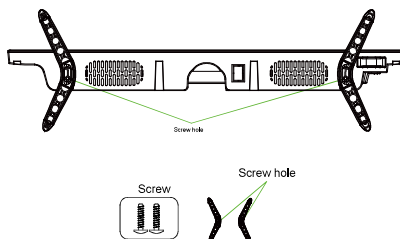

Wall Bracket Assembly (optional)


1. Attach the wall bracket to the wall.
2. To avoid damage, place the screen on a soft flat surface.
3. If necessary, remove the stand.
4. Attach the television set to the wall bracket by means of the VESA mounting.

NOTE

- > Make sure that the mounting screws (M4) project into the television set by no more than 8 mm. Longer screws can damage the set.
- > A wall bracket can be bought separately. Product information available at <http://halter.caratec.de>
- > Use only a wall bracket suitable for the size and weight of the television set.
- > Follow the instructions for the assembly of the wall bracket.

4. Control Buttons

 
The control buttons are on the backside of the housing. They control the most important functions.

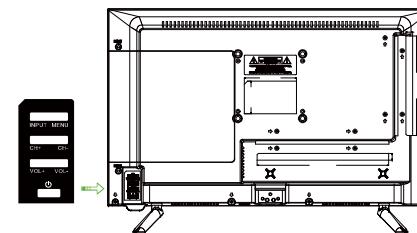

Designation	Explanation
INPUT	Press to select the input source
MENU	Press to enter the main menu
CH+	Press to skip to the next channel
CH-	Press to skip to the previous channel
VOL+	Press to increase the volume
VOL-	Press to decrease the volume
⏻	Press to switch the TV on/off

5. Connections to the television set

 External devices or sources can be connected at the rear of the television set.

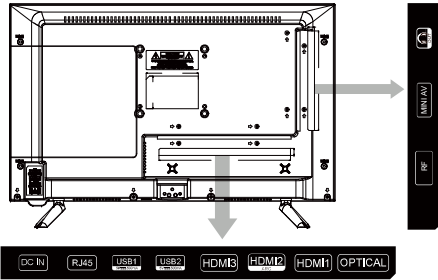


Designation	Explanation
DC IN:	Power cord connection/power supply
RJ45:	Network connection to the router for the Internet connection
USB:	USB connection
HDMI:	HDMI connection
OPTICAL:	Connect to the Optical Audio in port of an audio device
RF:	Satellite antenna connection
MINI AV:	AV input (adapter included)
Headphones:	Connection for headphones/external speakers (3.5 mm jack)

6. Remote Control

Place batteries in the remote control

 1. Open the battery compartment of the remote control.
2. Insert the batteries provided (AAA, 2 x 1.5 volts).

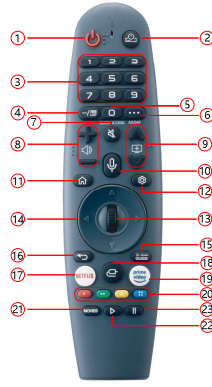

1. **POWER:** To switch the device on or standby
2. : Set-Top-Box On/Off
3. **NUMBER KEYS:** Direct program selection
4. : Channel list
5. **/ QUICK/ACCESS:**
 - Brief: Number key 0
 - Hold: Quick Access

6. **•••** :
 - Brief: Screen remote
 - Hold: Audio description On/Off
7. : Disable or enable the sound
8. : Adjust the volume level
9. : Channel selection
10. : Activate Voice assistant
11. : Smart Functions
12. : Quick Settings
13. **Mouse / OK:**
 - **Mouse** : Scroll pages & Channel change
 - **OK:** Confirm selection
14. **ARROWKEYS:** Move within the menu
15. **GUIDE:** Electronic Program Guide
16. **BACK:** Return to the previous menu / Exit the menu
17. **NETFLIX:** Open Netflix
18. : Input picker
19. **PRIME VIDEO:** Open Prime Video
20. **Color buttons:**
 - **Menu:** Menu function as displayed
 - **TV Teletext mode:** Open further teletext pages directly
21. **MOVIES:** Call Movies from the Internet
22. :
 - **TV mode:** Live Play back
 - **USB mode:** Play
23. : Pause

7.Quick Set-Up

WEE2.0



It provides guides related to TV manipulation, broadcasting, content utilization, device connection, smart functions, settings and problem solving so that user can refer to it when using TV.

You can watch the manual at the same time while watching TV or running the app. You can easily view the user's manual using the Description menu or Magic Explorer function.

8. Trouble Shooting

Problem	Action
Television set cannot be turned on	<p>Make sure that the power cable is properly inserted.</p> <p>Make sure that the On/Off switch on the bottom of the television set is turned on.</p> <p>Make sure that the polarity of the power supply is correct.</p>
No Picture	<p>Make sure that the correct source (INPUT) is selected.</p> <p>Make sure that the correct source or antenna is properly connected.</p>
No Sound	<p>Check the volume setting.</p> <p>Check whether the Mute function is activated.</p>
Poor Picture Quality	<p>Make sure that the antenna cable is properly connected.</p> <p>Check the picture settings.</p>
Picture too large/small, distorted.	Press the ASPECT button of the remote control to change the image display.
Blue screen	Make sure that the appropriate input (INPUT) is selected.
Television set does not react to the remote control	Make sure that the batteries have been inserted correctly. If necessary, insert new batteries.
DTV/DTB-T mode-error message "No signal"	Check the antenna connection. Re-start the automatic channel search.
Satellite --no signal	Check the list of channels. In the configuration section of the menu you can restore the standard list of channels.

9.Specification

Technical Data	SLT190U
Energy efficiency class*	F
Visible diagonal screen size in cm	47
Visible diagonal screen size in inch	18,5
Power consumption stand-by	0,50 Watt
Power consumption OFF	0,00 Watt
Resolution (Pixel)	1366 x 768 (HD)
Image format	16:9
Contrast ratio	1000 : 1
Brightness	250 cd/m ²
Viewing angle (R/L/T/B)	89°/89°/89°/89° (wide-angle)
Loudspeaker	2 x 5 Watt
Analog TV-Tuner	yes
HDMI	yes (3x)
RJ45	yes
Composite (FBAS) 3,5 mm jack	yes
USB connection (media player)	yes (2x)
Integrated Bluetooth transmitter	yes
Audio Ausgang (fixed level)	yes
Digital audio output	yes
Headphone (3,5 mm)	yes
Remote control	yes

12V connection cable	yes
VESA mounting option 100 x 100	yes
Set switch on/off	yes
Supported USB file formats	Video, Photo, Audio; Software Update
Operating voltage	9,5-32V
Temperature range operation/storage	0...50°C/20...60°C
Pixel defect class to EN ISO 9241-307	0
Weight (TV-set incl. accessories)	3,2kg
Dimensions (W x H x D in mm) without foot	438 x 267 x 51 mm