

**Operating Instructions:**

**Important:** Position the defogger as close as possible to the area that requires defogging. As the temperature of the glass rises, the defogged area increases in size.


To use the suction cup remove permanent base and slide post into hole on top of suction cup.

Attach to dash or roof of cabin with suction cup or permanent base that is provided.

Periodic adjustments of the defogger angle and direction will increase the defogged area.

Unplug defogger when engine is not running.

This model will normally defog a bell-shaped area approximately 8-10" wide by 12-14" high. This area will increase in size as the glass temperature increases and the defogger is adjusted to the areas requiring defogging.

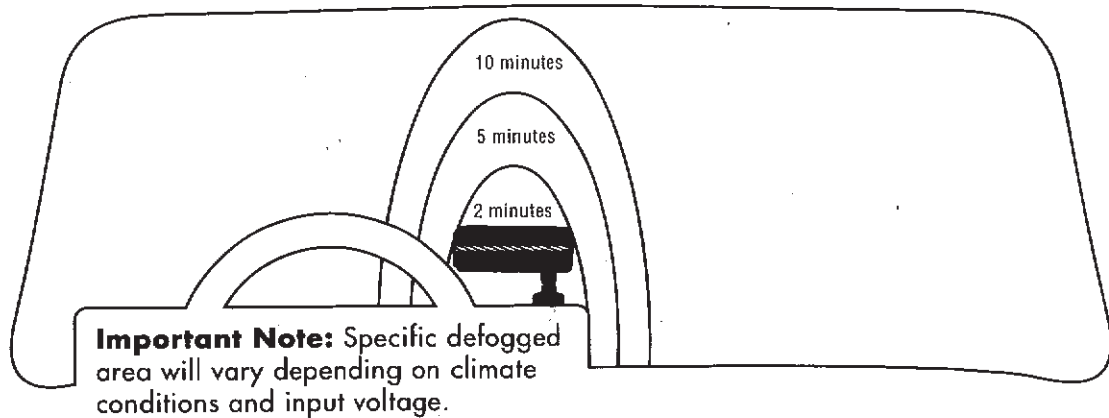

Made In Taiwan

