
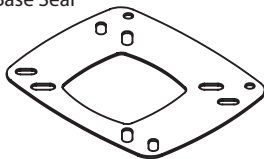


Installation Instructions


20-07-2021 (Issue 2)

WD-RAD-01

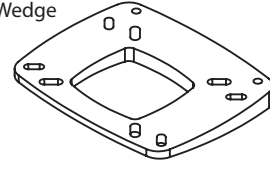



Parts List

<p>Base Seal</p>  <p>19026 1</p>	<p>Wedge</p>  <p>17224 1</p>
--	---

Optional Extra


<p>4° Washer</p>  <p>WD-WP 4</p>

Tools Required

 <p>Spanner to match device fixings</p>	 <p>8.5mm (13/32")</p>
 <p>Hole saw ø50mm (2")</p>	 <p>Power Drill</p>

Parts Required

 <p>M8 Bolts</p>	 <p>Large Plain washer</p>
---	---

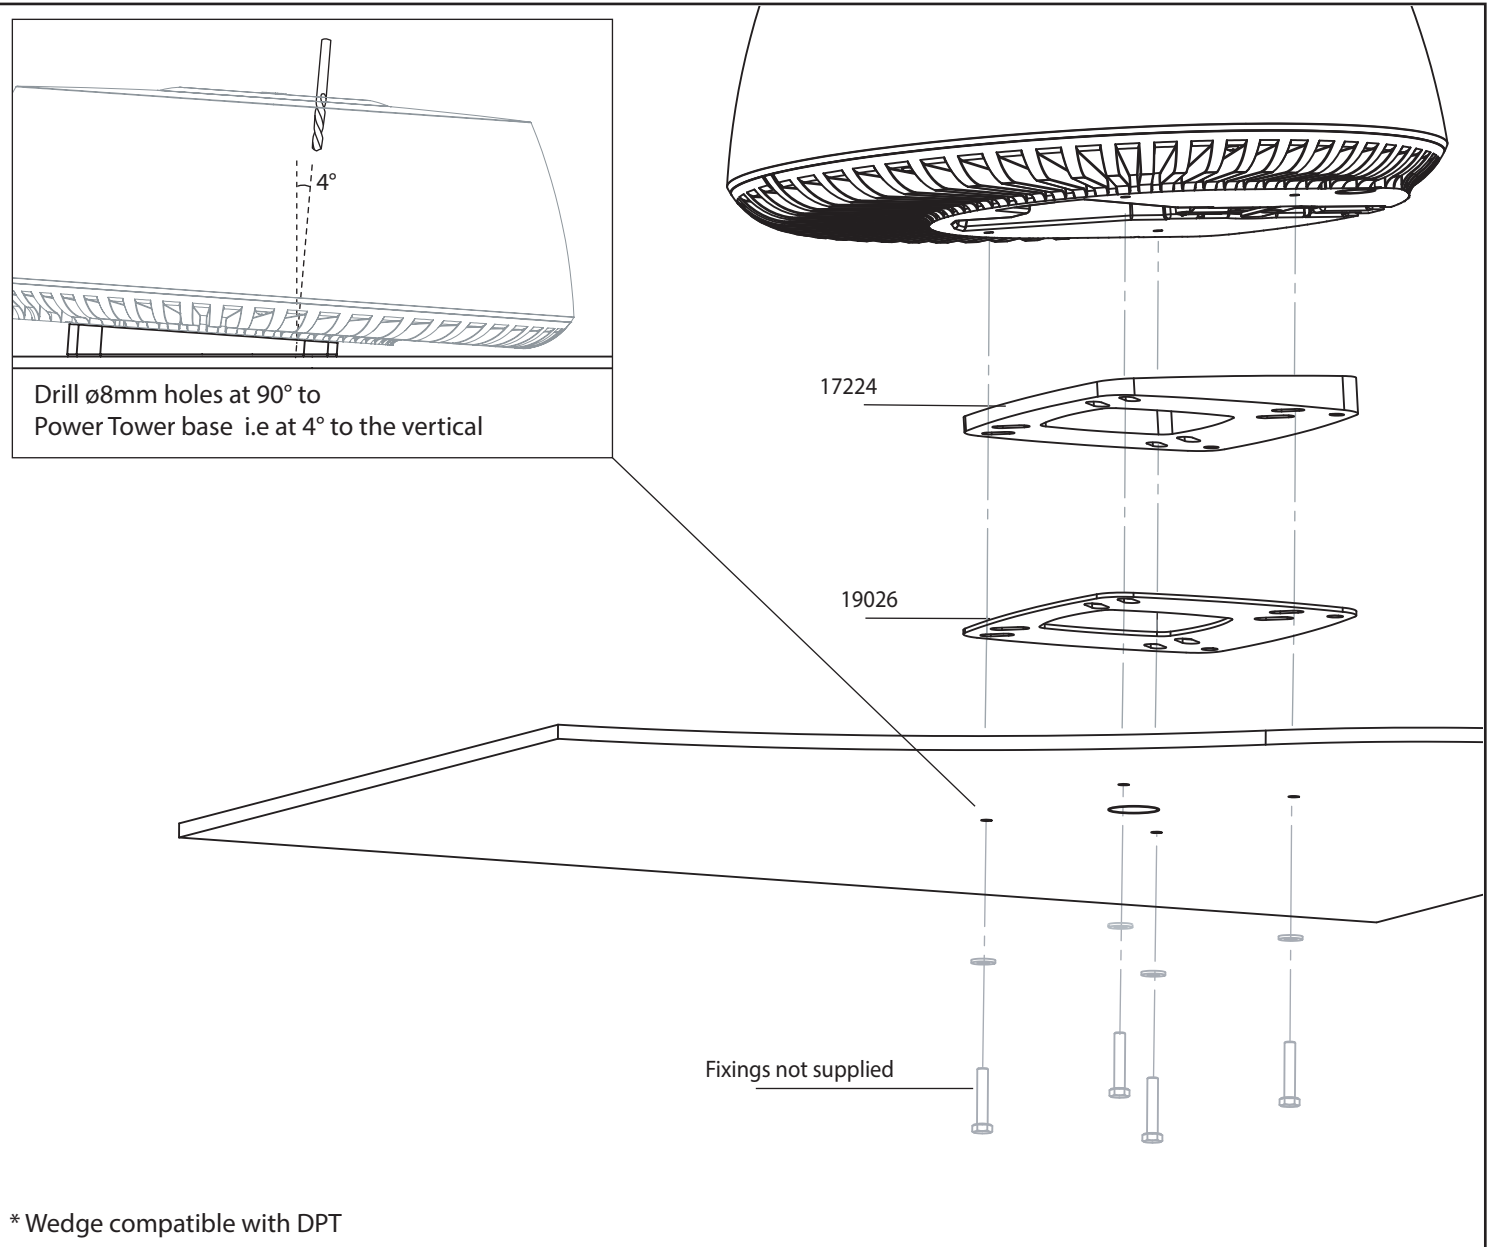

Share your installation with us.



UK & International
+44 (0)1392 531280
sales@scanstrut.com

For further installation
and warranty information
please visit:
www.scanstrut.com

USA
+1 860 308 1416
usasales@scanstrut.com

SCANSTRUT®