
# SEAVIEW// ELEVATE YOUR ELECTRONICS

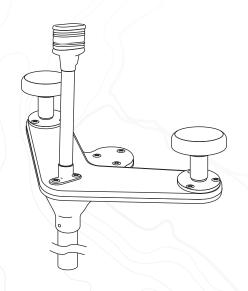

## **INSTALLATION INSTRUCTIONS**


For Seaview Light Bar Top:

PMU2A


Refer to website for most up to date instructions and videos.

WWW.SEAVIEWGLOBAL.COM

#### **PARTS INCLUDED**

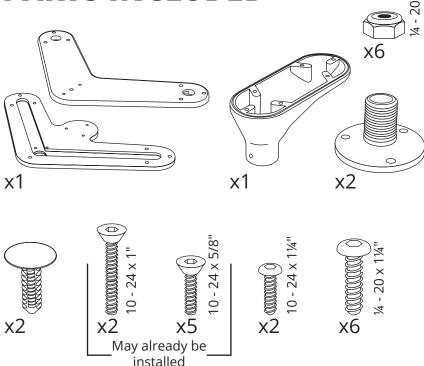


#### **TOOLS NEEDED**

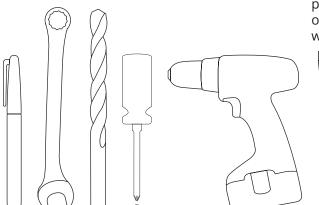

Sudbury Elastomeric Marine Sealant is recommended. To purchase call 800-655-7922 or visit www.seaviewglobal.com




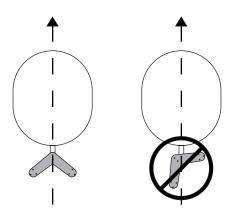

Make sure that the #PMA-U2A is facing forward.


1


Apply marine adhesive sealant to the groove of the base.

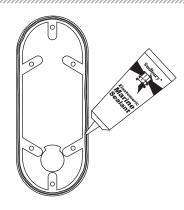


2

Screw the lower portion of the spreader to the base using the 5 screws (10-24 x 5/8") using an allen wrench.

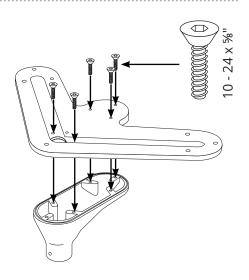


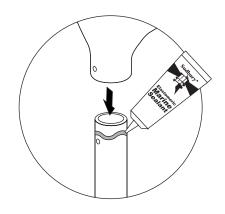

Insert the plastic rivets into the hole on the front and back of the base.

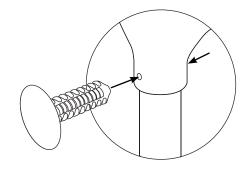

If you are using a light drill a hole into the top portion of the spreader for the wiring.

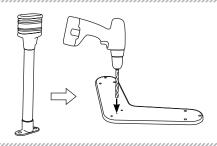


Drill holes on the ends of the spreader for any GPS wiring.






Apply marine adhesive sealant to the lower portion of the spreader.

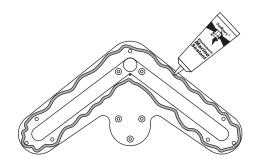



Route all wiring through the plastic threaded adapters and spreader.

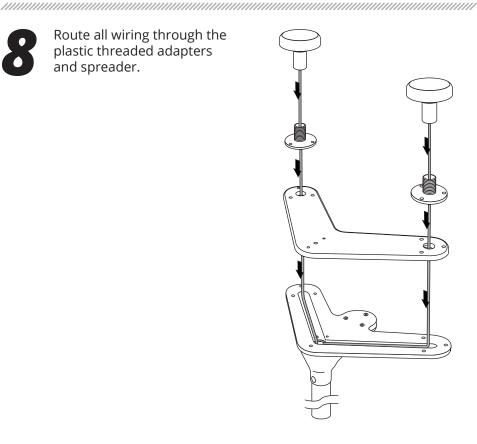

**9**A

If you are using a light use the hardware listed in this step.

10 - 24 x 1¼"

14-20 x 1¼"




If you are NOT using a light, use the hardware listed in this step.

14-20 x 11/4"

14-20 x 11/4"


#### **OPTIONAL ACCESSORIES**

Call 800-655-7922 or visit www.seaviewglobal.com for available accessories.

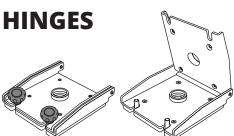


Seaview Hinge Adapters fold in any direction necessary for added height clearance.

#### **WEDGES**

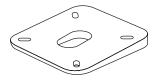


Compensates for plane angle. Available in 2, 4 or 6 degree wedges.

#### **CABLE GLANDS**

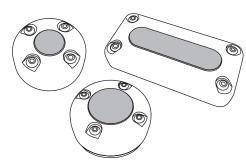

Seaview Cable Glands provide waterproof cable routing.

#### **SPREADER KIT**

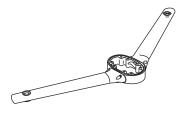

### **SP1-MOD**Allows user to mount GPS units or antennas onto a Seaview Modular Mount.



**SEAVIEW**//

Tel: 800-655-7922 www.seaviewglobal.com

**EUROPEAN OFFICE** 

Tel: +33 4 94 53 27 70 www.seaviewprogress.com